




FB-14in

INSTALLATION PROCESS

FB-14in

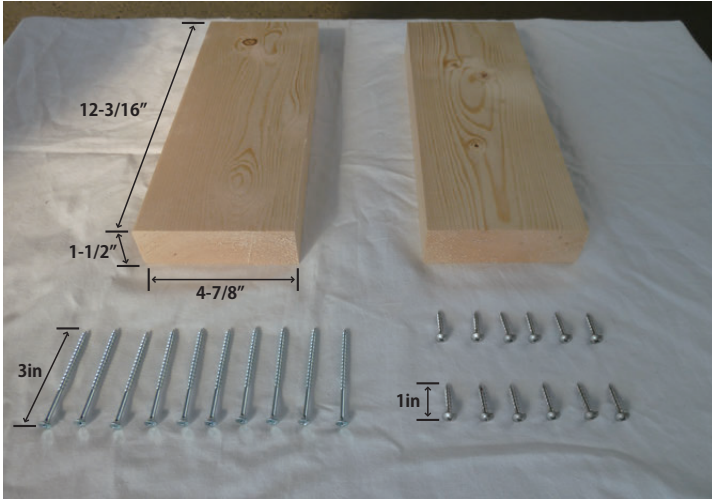

1. Materials needed for single FB-14in.

- 2 pieces of wood W 12-3/16" , H 1-1/2" , D 4-7/8" (W 310mm, H 38mm, D 124mm)
- 10 wood screws 3 in. (No.8 recommended)
- 12 wood screws 1 in. (No.8 recommended)

2. Tools Needed

- Ruler, Electric drill, Hammer, Caulking gun



3. Find a place on the roof where FB-14in can sit stable without leaning.



4. Outline the FB-14in so that you know where exactly it will be placed.



5. Drill five 3in.-screws only a half way on each pieces of wood and caulk the tip of the screws. This will prevent leaking of rain by the screw holes.



6. Attach the two pieces of wood to the roofs securely with screws. As you see on the picture, please place them about 1/4 in. above the bottom lines. This will prevent the wood from soaking rain.



7. Caulk around the 3 sides of wood, and do not caulk the bottom side. The bottom side will let the rain go through.



8. Cover FB-14in on those attached wood and make sure FB-14in is exactly where you drew the lines.



9. Make 6 guide holes on the front side and another 6 guide holes on the back side of B-12. Those are for 1 in.-screws to pierce through the wood.



10. Screw 6 1in. screws on the front.



11. Screw 6 1in. screws on the back.

Only for galvalume steel sheet products from here



12. Use the touch-up paint that comes with B-12, and paint the head of the screws.



13. Paint any scratches from setting B-12 with the touch-up paint.



14. Paint the caulking as well.



FINISH Please wear a helmet, goggles, gloves and safety belt to work safely and efficiently at high working site.